


# UNG-07.S1

## USER'S MANUAL

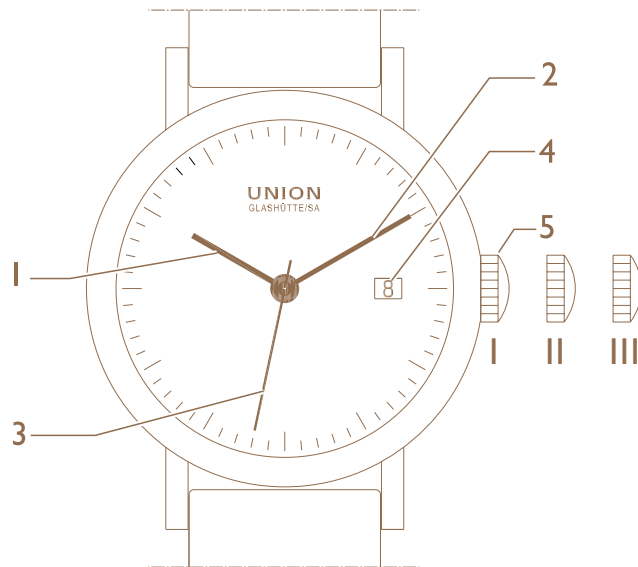

### TECHNICAL SPECIFICATIONS

- Mechanical movement from the UNG-07.01 / UNG-07.S1 family with automatic winding and date
- 25,200 vibrations/hour
- Power reserve: Approx 60 hours

### DISPLAY / FUNCTIONS

- I Hour hand
- 2 Minute hand
- 3 Seconds hand
- 4 Date
- 5 3 position crown\*
  - I Rest and winding position
  - II Rapid date correction position
  - III Time setting position, with stop second and midnight date change

\* In models from the „Sport“ series, the crown is also screwed to the case to ensure increased water resistance. To operate the crown, turn it counterclockwise until it pops out clearly through the built-in spring. To screw the crown back on, press it slightly towards the case and turn it clockwise until it stops. Do not operate the crown under water.

# UNG-07.S1

## USE

### WINDING

Crown in position **I**, not pulled out

Manual winding is necessary if you have not worn your watch for some considerable period of time. To restart it, you only need to turn the crown a few times (clockwise), or to tilt your watch from side to side a few times. To restore your watch's 60 hour power reserve, around 115 turns of the crown (forward) are required.

When wearing your watch, the automatic device winds it every time you move your wrist.

#### Notes

The accuracy may be influenced by the wearing conditions. There is no stop of the crown at full winding.

### SETTING THE TIME

Crown in position **III**, pulled out

Pull the crown out to position **III** carefully; the seconds hand (**3**) will stop. Turn the crown forwards or backwards to the desired time, and then push it back into the rest position **I**.

Once the hour hand passes the 12 o'clock position, you can see if it is indicating midnight (date will change) or midday (date will not change).

#### Advice on how to synchronise your watch

To synchronise the seconds hand (**3**) with an official time signal (radio/TV/Internet), pull the crown out to position **III**; the seconds hand will stop. At the signal, push the crown back into the rest position **I**.

### RAPID DATE CORRECTION

Crown in position **II**, intermediate

Pull the crown out to position **II**, turn it backwards until it displays the desired date, and then push it back into the rest position **I**. During this operation, your watch will continue running, so the time will not need to be re-set. You will need to re-set the date manually after months with less than 31 days.

## CARE AND MAINTENANCE

We would advise you to clean your watch regularly (except for the leather strap) using a soft cloth and lukewarm soapy water. After immersion in salt water, rinse the watch in fresh water and leave it to dry completely.

Ensure that you do not leave it in places subject to great temperature and humidity variations, in intense sunlight or near strong magnetic fields.

We recommend you have your watch inspected every 3 to 4 years by your approved dealer or agent. For an irreproachable maintenance service and to ensure the warranty remains valid, always approach an approved dealer or agent.

### WATER RESISTANCE PRECAUTIONS

Your watch is water resistant but, following a shock, it may lose its water resistance without you realising. Water resistance must be checked up during its scheduled inspection.

**Important: In the event of failure of your watch, entrust it only to an approved dealer or agent (see the warranty).**