


UNG-25.01 / UNG-25.S1

USER'S MANUAL

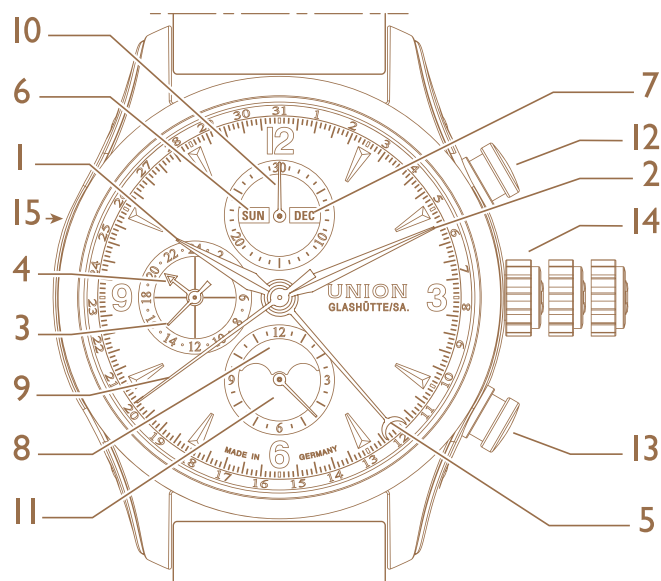

TECHNICAL SPECIFICATIONS

- Mechanical movement chronograph UNG-25.01/ UNG-25.S1 with automatic winding, day corrector at 10 o'clock and moon phase
- Number of jewels: 25
- 28,800 vibrations/hour
- Power reserve: Approx 60 hours

DISPLAY / FUNCTIONS

- I Hour hand
- II Minute hand
- III Small seconds hand
- IV 24 hour hand
- V Date indicator hand
- VI Day indicator
- VII Month indicator hand
- VIII Moon phase
- IX Central 60 second hand (chronograph)
- X 30 minute counter (chronograph)
- XI 12 hour counter (chronograph)
- XII Start/Stop push-button (chronograph)
- XIII Reset push-button (chronograph)
- XIV 3 position crown
 - I Rest and winding position
 - II Rapid date, month and moon phase correction position
 - III Time setting position, with stop second and midnight date and day change
- XV Corrector (rapid day correction)

UNG-25.01 / UNG-25.S1

USE

WINDING

Crown in position I, not pulled out

Manual winding is necessary if you have not worn your watch for some considerable period of time. To restart it, you only need to turn the crown a few times (clockwise), or to tilt your watch from side to side a few times. To restore your watch's 60 hour power reserve, around 38 turns of the crown (forward) are required.

When wearing your watch, the automatic device winds it every time you move your wrist.

Notes

The accuracy may be influenced by the wearing conditions. There is no stop of the crown at full winding.

SETTING THE TIME

Crown in position III, pulled out

Pull the crown out to position III carefully; the seconds hand (3) will stop. Turn the crown forwards or backwards to the desired time, and then push it back into the rest position I.

Once the hour hand passes the 12 o'clock position, you can see if it is indicating midnight (date and day will change) or midday (date and day will not change).

Advice on how to synchronise your watch

To synchronise the seconds hand (3) with an official time signal (radio/TV/Internet), pull out the crown to position III; the seconds hand will stop. At the signal, push the crown back into the rest position I.

DATE AND MONTH CORRECTION

Crown in position II, intermediate

The date is indicated by the hand (5) and the month in the aperture (7). You will need to re-set the date and month manually after months with less than 31 days.

Pull the crown out to position II and turn it counterclockwise until it displays the desired date and month. Push the crown back into the rest position I. During this operation, your watch will continue running, so the time will not need to be re-set.

Important: Never correct the date between 10 p.m. and 2 a.m.; the movement is changing the date and possibly the month.

MOON PHASE CORRECTION

Crown in position II, intermediate

Pull the crown out to position II and turn it clockwise to correct the moon position, referring to a lunar phase chart. Push the crown back into the rest position I. During this operation, your watch will continue running, so the time will not need to be re-set.

Important: Moon phase correction is impossible between 3 a.m. and 4 a.m.

DAY CORRECTION

Press the corrector as many time as needed (15), to move the disc forward until the desired day is displayed in the aperture (6). During this operation, your watch will continue running, so the time will not need to be re-set.

Important: Day correction is impossible between 9.30 p.m. and midnight.

CHRONOGRAPH FUNCTION

Press the Start/Stop push-button (12) to start the chronograph. Press the Start/Stop push-button (12) again to stop it. The chronograph will resume if the Start/Stop push-button (12) is pressed again (added times), or the three chronograph hands (9, 10 and 11) will return to zero if push-button (13) is pressed.

CARE AND MAINTENANCE

We would advise you to clean your watch regularly (except for the leather strap) using a soft cloth and lukewarm soapy water. After immersion in salt water, rinse the watch in fresh water and leave it to dry completely.

Ensure that you do not leave it in places subject to great temperature and humidity variations, in intense sunlight or near strong magnetic fields.

We recommend you have your watch inspected every 3 to 4 years by your approved dealer or agent. For an irreproachable maintenance service and to ensure the warranty remains valid, always approach an approved dealer or agent.

WATER RESISTANCE PRECAUTIONS

Your watch is water resistant but, following a shock, it may lose its water resistance without you realising. Water resistance must be checked up during its scheduled inspection.

Important: In the event of failure of your watch, entrust it only to an approved dealer or agent (see the warranty).