


# UNG-56.S1

## USER'S MANUAL

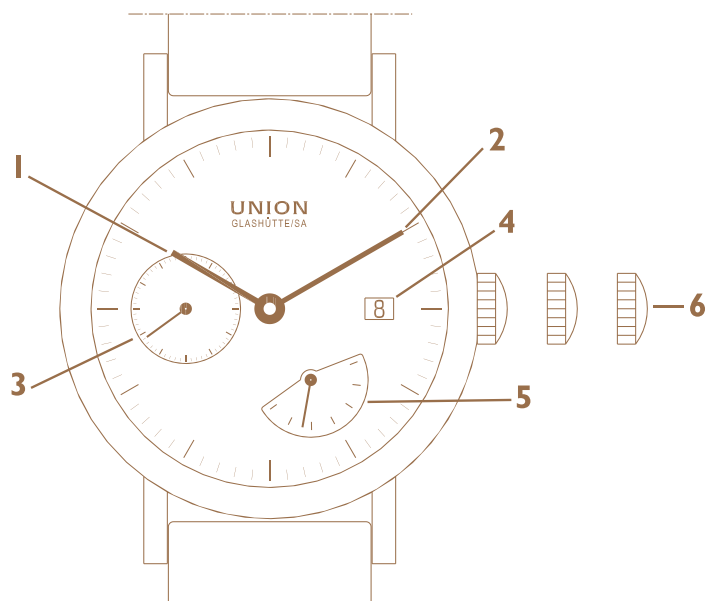

### TECHNICAL SPECIFICATIONS

- Manual winding movement with date and power reserve display
- 28,800 vibrations/hour
- Power reserve: Approx 60 hours

### DISPLAY / FUNCTIONS

- 1 Hour hand
- 2 Minute hand
- 3 Seconds hand
- 4 Date
- 5 Power reserve
- 6 3 position crown
  - I Rest and winding position
  - II Rapid date correction position
  - III Time setting position, with stop second and midnight date change

# UNG-56.S1

## USE

### WINDING

Crown in position **I**, not pulled out

Your model has a manual winding movement. If, after having fully wound the watch, you do not wear it for longer than 60 hours, it will stop. You must rewind it by hand to get it moving again. To do this, turn the crown in a clockwise direction. The balance will begin to move after a few turns. Now turn the crown again carefully until the power reserve display is in the 60 position.

It is not possible to overtension the mainspring.

For daily use, we recommend that you wind the watch in the morning before you put it on. The movement spring then has enough power reserve to keep your watch running smoothly until the next day and beyond.

### Notes

The accuracy may be influenced by the wearing conditions. There is no stop of the crown at full winding.

### SETTING THE TIME

Crown in position **III**, pulled out

Pull the crown out to position **III** carefully; the seconds hand (**3**) will stop. Turn the crown forwards or backwards to the desired time, and then push it back into the rest position **I**.

Once the hour hand passes the 12 o'clock position, you can see if it is indicating midnight (date will change) or midday (date will not change).

### Advice on how to synchronise your watch

To synchronise the seconds hand (**3**) with an official time signal (radio/TV/Internet), pull the crown out to position **III**; the seconds hand will stop. At the signal, push the crown back into the rest position **I**.

### RAPID DATE CORRECTION

Crown in position **II**, intermediate

Pull the crown out into position **II**, turn it in a clockwise direction until the desired date is displayed and then push it back into rest position **I**. During this operation, your watch will continue running, so the time will not need to be re-set. You will need to re-set the date manually after months with less than 31 days.

Important: Never correct the date and/or day between 8 p.m. and 2 a.m.; the movement is changing the date and the day.

## CARE AND MAINTENANCE

We would advise you to clean your watch regularly (except for the leather strap) using a soft cloth and lukewarm soapy water. After immersion in salt water, rinse the watch in fresh water and leave it to dry completely.

Ensure that you do not leave it in places subject to great temperature and humidity variations, in intense sunlight or near strong magnetic fields.

We recommend you have your watch inspected every 3 to 4 years by your approved dealer or agent. For an irreproachable maintenance service and to ensure the warranty remains valid, always approach an approved dealer or agent.

### WATER RESISTANCE PRECAUTIONS

Your watch is water resistant but, following a shock, it may lose its water resistance without you realising. Water resistance must be checked up during its scheduled inspection.

**Important: In the event of failure of your watch, entrust it only to an approved dealer or agent (see the warranty).**